

Button Walk Through: Changing Sounds

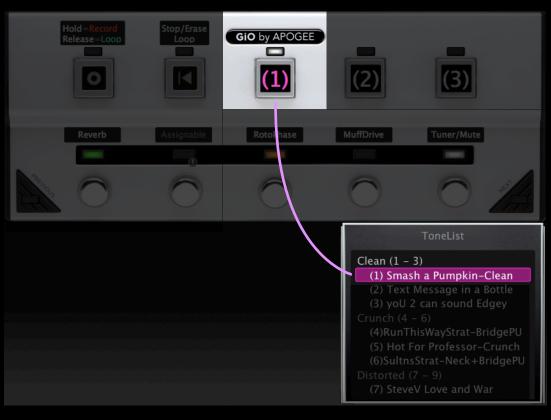

Mainstage ScreenShot:

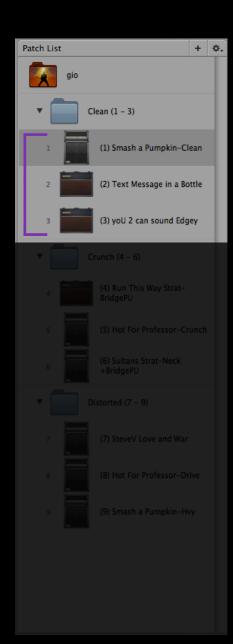



Button Walk Through: Switching Type



Press to switch through Clean Crunch and Distorted



Button Walk Through: Controlling Effects



Press to turn effects on/off



Button Walk Through:

First, hold this button down and start playing a riff.

Then, release it at the end of your riff.

Hold it down again when you'd like to record a layer



